
## **INSTRUCTION MANUAL**





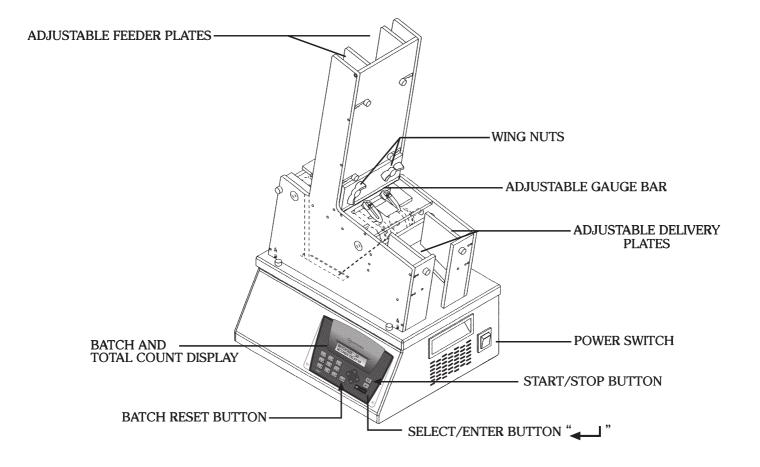

#### **OPERATING INSTRUCTIONS:**

- 1. First, locate the **adjustable gauge bar** pointed out for you in the diagram above. -loosen **wing nuts** on the gauge bar plate -slide ticket between steel gauge bar and both belts, then evenly tighten wing nuts
- 2. Set adjustable feeder and delivery plates to correct width.
- 3. Turn **power switch** on (located at back-right side of cabinet).
- 4. Load tickets into feeder with natural curl down. Excessively curled tickets must first be straightened. **Do not reload tabs while in run position.** (Capacity 400)
- 6. Set delay between batch (Seconds), press Enter "...
- 7. Press **reset** button on operator panel.
- 8. Press **start/stop** "(j)" to begin.
- 9. Press **start/stop** at any time to stop (press **start** to resume).

#### **MAINTENANCE INSTRUCTIONS:**


- 1. Clear the AccuCounter™ of all paper dust daily with a vacuum or can of air.
- 2. Use 409® or a similar product to clean exterior surfaces on a weekly basis. (USE NO PETROLEUM BASED SOLVENTS ON PLASTIC PARTS)
- 3. Wipe off belts with rubbing alcohol daily if your AccuCounter™ receives heavy use each day.
- 4. Clean **speed-up wheel** (shown in following parts section), as often as you clean the belts, with alcohol and a cotton swab.
- 5. Wipe off **photo eye** with clean damp cloth only.

### **SPECIFICATIONS:**


Height: 22.5" x Width: 14.5" x Depth: 10" Operating Supply Voltage: 120 VAC. Storage Temperature: -22 to 160 degrees F.

Unit Shipping Weight: 25 lbs.


Materials Used: Hoppers - Lexan polycarbonate material Base Cabinet - Custom fabricated steel

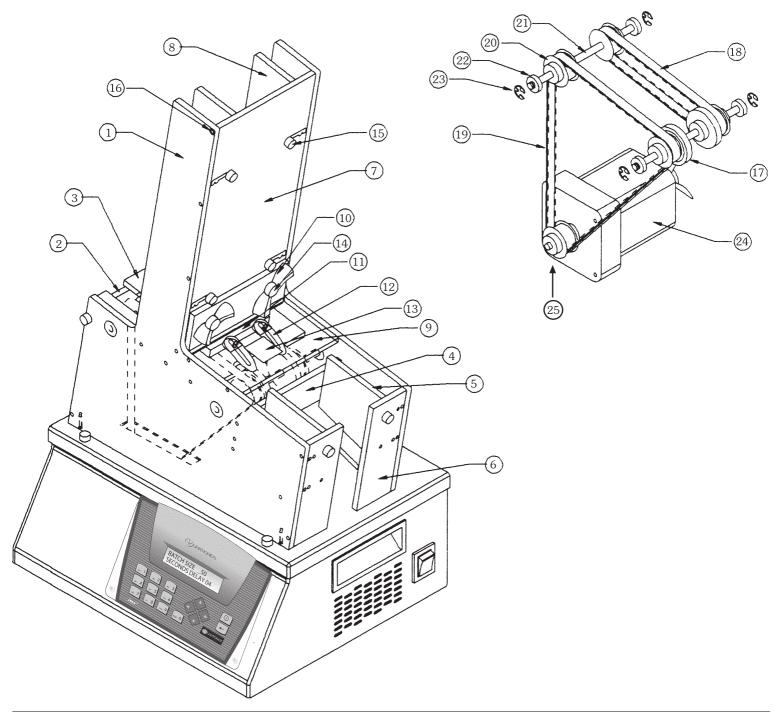

ACCUCOUNTER™ PARTS LIST											
ITEM #	DESCRIPTION	QTY.	PART #	ITEM #	DESCRIPTION	QTY.	PART #				
1.	SIDE PLATE	2	92756	14.	WING NUT, 8-32	2	92745				
2.	BACK PLATE	1	92602	15.	6-32 CAP SCREW (BLACK)	10	92622				
3.	SKID PLATE	1	92752	16.	6-32 BUTTON HEAD SCREW	36	92631				
4.	DELIVERY HOPPER	1	92754	17A.	SPEED-UP WHEEL	2	99509				
5.	ADJ. DELIVERY PLATE	2	92610	17B.	SPEED-UP WHEEL"O"RING	2	99510				
6.	DELIVERY PLATE (SET)	1	92611	18.	TRANSFER BELT	1	92629				
7.	SUPPORT PLATE	1	92751	19.	DRIVE BELT	1	92627				
8.	FEEDER DIVIDER PLATE	2	92606	20.	PULLEYS	4	92628				
9.	FINGER PLATE	1	92614	21.	.25" x 5.5" SHAFT	2	92619				
10.	SUPPORT PLATE, GAUGE BAR	1	92753	22.	BALL BEARING	4	92624				
11.	GAUGE BAR	1	92605	23.	"E" CLIP	4	92630				
12.	SPRING FINGER	2	92618	24.	MOTOR	1	92700				
13.	REFLECTIVE TAPE	1	92607	25.	TIMING PULLEY W/AL. CORE	1	92732				

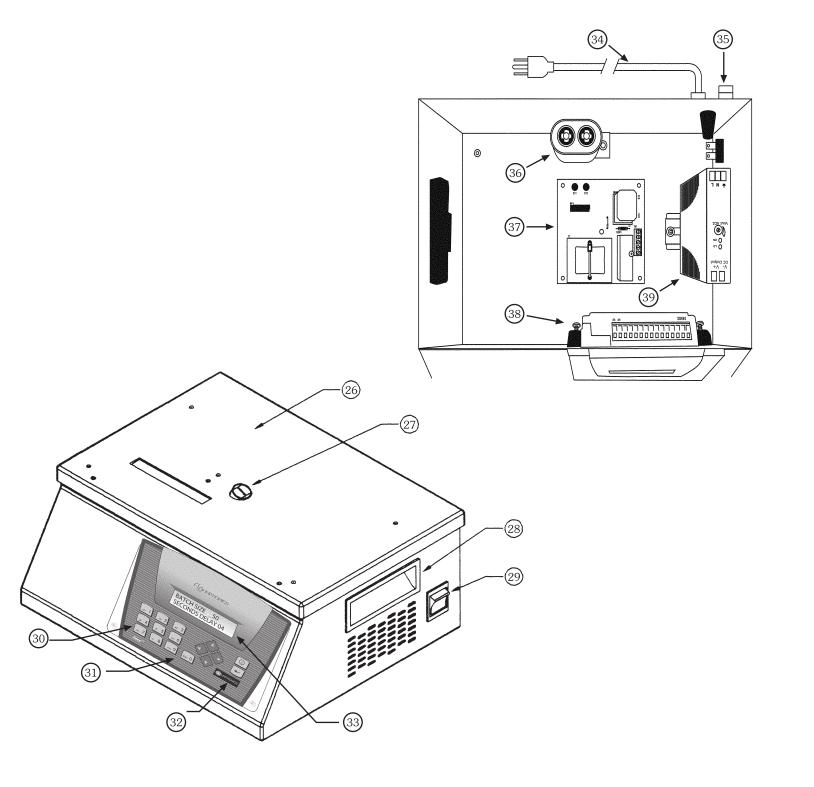

ACCUCOUNTER™ PARTS LIST CONT.											
ITEM #	DESCRIPTION	QTY.	PART #	ITEM #	DESCRIPTION	QTY.	PART #				
26.	CHASSIS W/ LID	1	92750	34.	POWER CORD	1	92864				
27.	PHOTO EYE	1	92865	35A.	FUSE HOLDER	1	92868				
28.	HANDLE	2	92652	35B.	4 AMP FUSE	1	92647				
29.	POWER SWITCH	1	92653	36.	CAPACITOR	1	92869				
30.	PLC W/ BACK PLATE	1	92761	37.	MODULE CIRCUIT BOARD	1	92743				
31.	BATCH RESET BUTTON	N/A	N/A	38.	PLC W/ BLACK PLATE	1	92761				
32.	RUN ON/OFF BUTTON	N/A	N/A	39.	POWER SUPPLY	1	92744				
33.	BATCH AND TOTAL										
	COUNT DISPLAY	N/A	N/A								

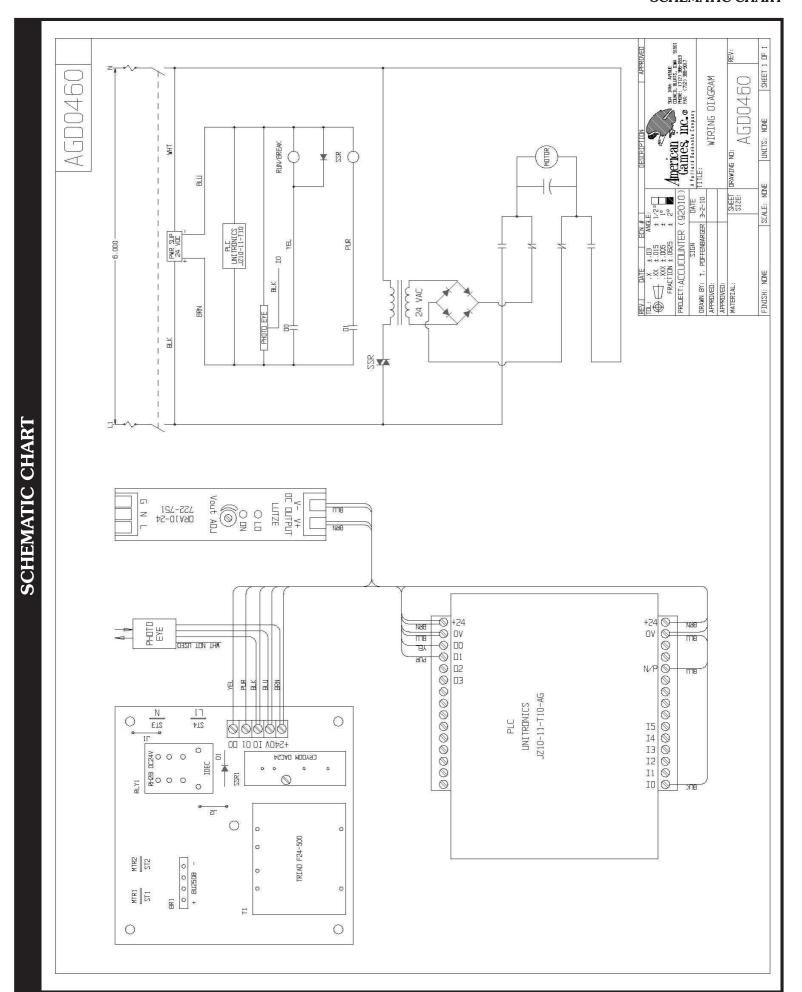



Automatic Pull-Tab Counting Machine By American Games, Inc.

# Limited Warranty

American Games, inc., warrants the AccuCounter against defects in material or workmanship for a period of six (6) months from the date of the original purchase as follows:

PARTS. In the event of the failure of any part of the AccuCounter through defect in material or workmanship during the period of the warranty, new or rebuilt parts from an equivalent model will be exchanged for such defective parts for said six (6) month period from the original purchase.

LABOR. Labor for removal and installation of any such defective parts will take place at a service facility determined at the sole discretion of American Games, inc. and will be provided for said six (6) month warranty period by American Games, inc. or its authorized representative.

Carry-in or ship-in expense to reach said designated service facility will be the sole responsibility of the purchaser.

This warranty applies to the original purchaser only. Your warranty card should be completed and returned at once. A purchase receipt or other proof of date of original purchase will be required before performance under this warranty is rendered.

This warranty is limited solely to failure due to defects in materials or workmanship that occurred during normal use of the AccuCounter. This warranty does not cover damage that occurs in shipment or failures which result from accident, misuse, abuse, neglect, lack of normal maintenance,\* mishandling, misapplication, alteration, modification, malfunction caused by faulty tickets, service by anyone other than an authorized American Games, inc. representative, or damage that is attributed to acts of God.

LIMITS AND EXCLUSIONS. There are no express warranties except as listed above.

AMERICAN GAMES, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact American Games, inc. or its authorized representative.

\*Normal maintenance is detailed in this Instruction Manual.



504 34th Avenue • Council Bluffs, Iowa 51501

For more information or assistance call 1-800-874-2637