
INSTRUCTION MANUAL



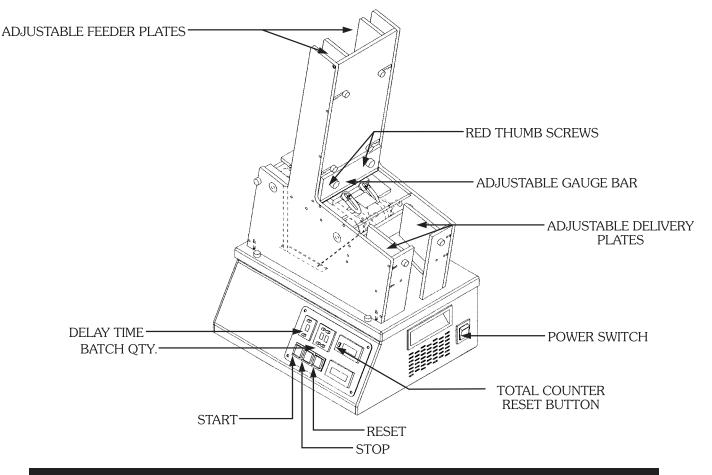

OPERATING INSTRUCTIONS:

- 1. First, locate the **adjustable gauge bar** pointed out for you in the diagram above. -loosen **red thumb screws** on the gauge bar plate -slide ticket between steel gauge bar and both belts, then evenly tighten screws
- 2. Set adjustable feeder and delivery plates to correct width.
- 3. Turn **power switch** on (located at back-right side of cabinet).
- 4. Load tickets into feeder with natural curl down. Excessively curled tickets must first be straightened. **Do not reload tabs while in run position.** (Capacity 400)
- 5. Set **delay** time between batches (located at the left corner of control panel).
- 6. Set **batch** quantity (located at top-center of control panel).
- 7. Press **total counter reset** button (located at the right corner of control panel) and the **black reset** button (located at bottom-center of control panel).
- 8. Press the **green start** button to begin.
- 9. Press the **red stop** button at any time (press start to resume).

MAINTENANCE INSTRUCTIONS:


- 1. Clear the AccuCounter™ of all paper dust daily with a vacuum or can of air.
- 2. Use 409® or a similar product to clean exterior surfaces on a weekly basis. (USE NO PETROLEUM BASED SOLVENTS ON PLASTIC PARTS)
- 3. Wipe off belts with rubbing alcohol daily if your AccuCounter™ receives heavy use each day.
- 4. Clean **speed-up wheel** (shown in following parts section), as often as you clean the belts, with alcohol and a cotton swab.
- 5. Wipe off **photo eye** with clean damp cloth only.

SPECIFICATIONS:


Height: 22.5" x Width: 14.5" x Depth: 10" Operating Supply Voltage: 120 VAC. Storage Temperature: -22 to 160 degrees F.


Unit Shipping Weight: 25 lbs.

Materials Used: Hoppers - Lexan polycarbonate material Base Cabinet - Custom fabricated steel

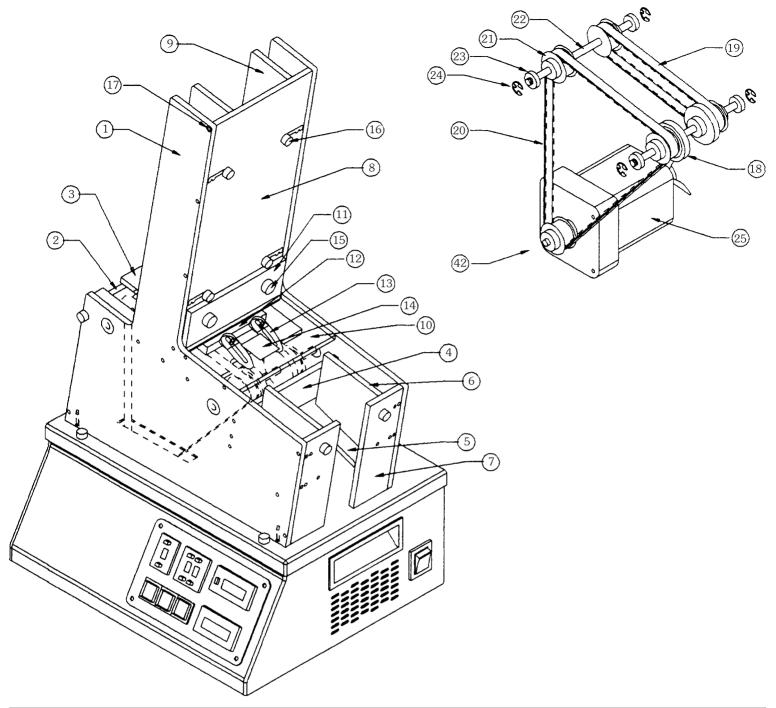


ACCUCOUNTER™ PARTS LIST											
ITEM #	DESCRIPTION	QTY.	PART #	ITEM #	DESCRIPTION	QTY.	PART #				
1.	SIDE PLATE	2	92601	14.	REFLECTIVE TAPE	1	92607				
2.	BACK PLATE	1	92602	15.	8-32 CAP SCREW	2	92620				
3.	ALUMINUM SKID PLATE	1	92603	16.	6-32 CAP SCREW	10	92622				
4.	BACK DELIVERY PLATE	1	92613	17.	6-32 BUTTON HEAD SCREW	36	92631				
5.	BOTTOM DELIVERY PLATE	1	92615	18A.	SPEED-UP WHEEL	2	99509				
6.	ADJ. DELIVERY PLATE	2	92610	18B.	O-RING- RUBBER	2	99510				
7.	DELIVERY PLATE (SET)	2	92611	19.	TRANSFER BELT	1	92629				
8.	SUPPORT PLATE	1	92604	20.	DRIVE BELT	1	92627				
9.	FEEDER DIVIDER PLATE	2	92606	21.	PULLEYS	5	92628				
10.	FINGER PLATE	1	92614	22.	.25" x 5.5" SHAFT	2	92619				
11.	"D" PLATE	1	92609	23.	BALL BEARING	4	92624				
12.	GAUGE BAR	1	92605	24.	"E" CLIP	4	92630				
13.	SPRING FINGER (SET)	2	92618	25.	MOTOR ASSEMBLY	1	92700				

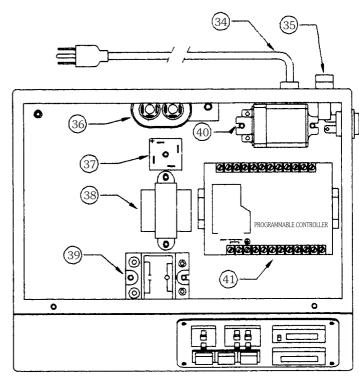

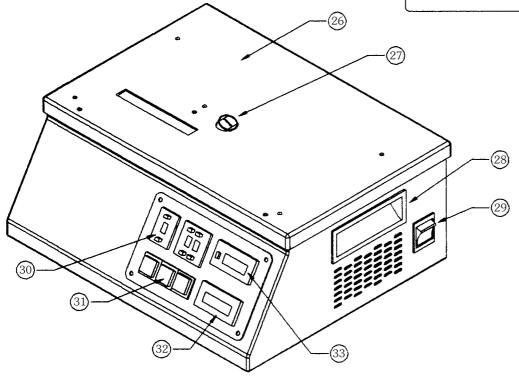

ACCUCOUNTER™ PARTS LIST CONT.											
ITEM #	DESCRIPTION	QTY.	PART #	ITEM #	DESCRIPTION	QTY.	PART #				
26.	ENCLOSURE	1	92650	34A.	POWER CORD	1	92864				
27.	PHOTO EYE	1	92865	34B.	STRAIN RELIEF	1	92643				
28.	HANDLE	2	92652	35.	FUSE HOLDER	1	92659				
29.	POWER SWITCH	1	92653	36.	CAPACITOR	1	92660				
30.	THUMB WHEEL	3	92654	37.	BRIDGE RECTIFIER	1	92661				
31.	PUSH BUTTON SWITCH	3	92655	38.	TRANSFORMER	1	92867				
32.	BATCH COUNTER			39.	SOLID STATE RELAY	1	92663				
	(NON-RESETTABLE)	1	92657	40.	BRAKE RELAY	1	92664				
33.	TOTAL COUNTER			41.	PROGRAMMABLE LOGIC						
	(RESETTABLE)	1	92657		CONTROLLER	1 1	92728				
				42.	TIMING PULLEY W/AL CORE	1	92732				

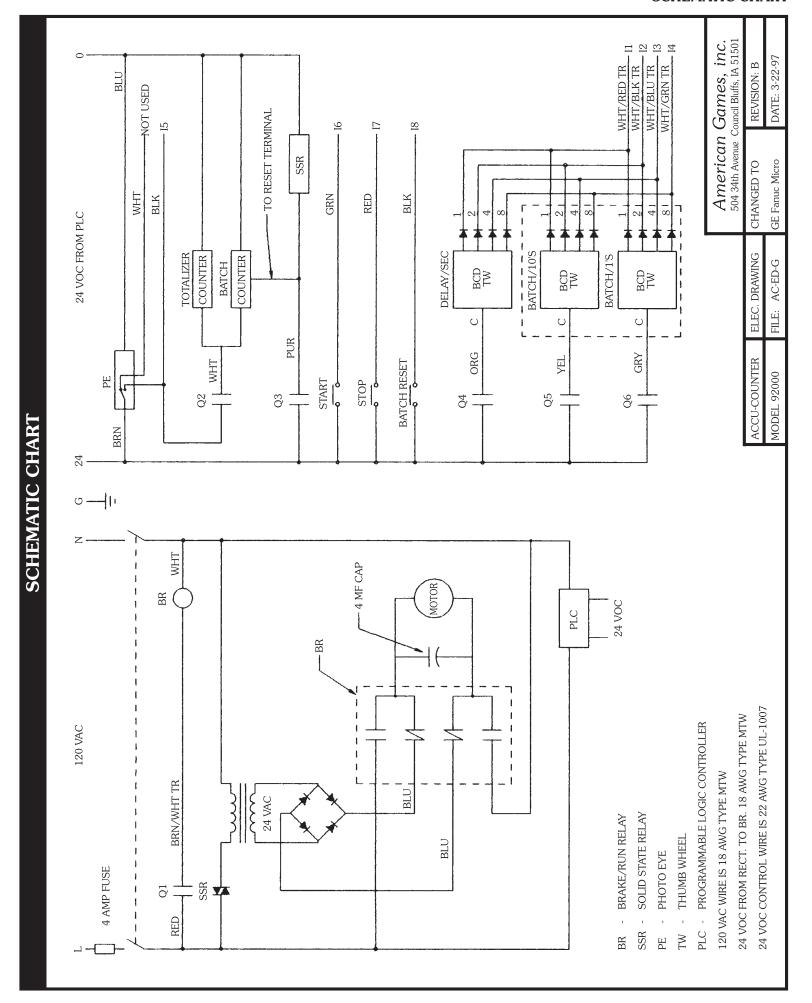



Automatic Pull-Tab Counting Machine By American Games, Inc.

Limited Marranty

American Games, inc., warrants the AccuCounter against defects in material or workmanship for a period of six (6) months from the date of the original purchase as follows:

PARTS. In the event of the failure of any part of the AccuCounter through defect in material or workmanship during the period of the warranty, new or rebuilt parts from an equivalent model will be exchanged for such defective parts for said six (6) month period from the original purchase.

LABOR. Labor for removal and installation of any such defective parts will take place at a service facility determined at the sole discretion of American Games, inc. and will be provided for said six (6) month warranty period by American Games, inc. or its authorized representative.

Carry-in or ship-in expense to reach said designated service facility will be the sole responsibility of the purchaser.

This warranty applies to the original purchaser only. Your warranty card should be completed and returned at once. A purchase receipt or other proof of date of original purchase will be required before performance under this warranty is rendered.

This warranty is limited solely to failure due to defects in materials or workmanship that occurred during normal use of the AccuCounter. This warranty does not cover damage that occurs in shipment or failures which result from accident, misuse, abuse, neglect, lack of normal maintenance,* mishandling, misapplication, alteration, modification, malfunction caused by faulty tickets, service by anyone other than an authorized American Games, inc. representative, or damage that is attributed to acts of God.

LIMITS AND EXCLUSIONS. There are no express warranties except as listed above.

AMERICAN GAMES, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact American Games, inc. or its authorized representative.

*Normal maintenance is detailed in this Instruction Manual.



504 34th Avenue • Council Bluffs, Iowa 51501

For more information or assistance call 1-800-874-2637